


1)



Unscrew the bottom nut and remove the pivot bolt.

2)

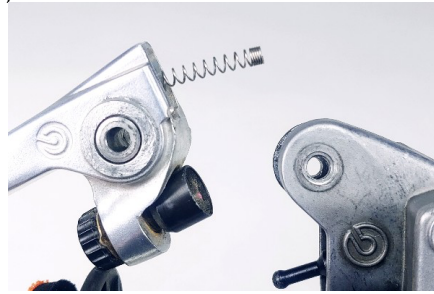

While removing the pivot bolt, hold the **RETURN SPRING** as it will pop out when the lever is free. Remove the black rod from inside the spring.

3)



Remove the **STOCK BUSHING** (metal sleeve) from the stock lever.

4)




Insert the **STOCK BUSHING** with the rim side up into the ASV lever.

5)



Insert the **RETURN SPRING** into the ASV lever. Do not reinstall the black rod.

6)

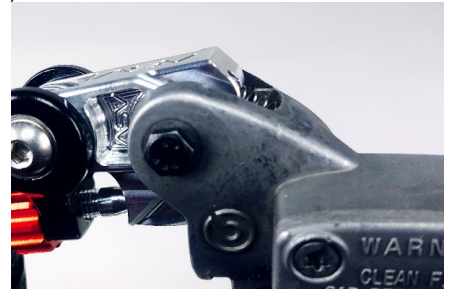

Insert the ASV lever into the stock perch and insert the pivot bolt. Screw the bottom nut until secure.