



Installation Guide

Unbreakable Levers for SUR-RON / Talaria E-Bikes #RE02

Tools Needed


- 2mm, 3mm, and 4mm hex wrench

CAUTION: REMOVE BATTERY BEFORE ATTEMPTING INSTALL!



2mm hex
Counterclockwise

Use a 2mm hex wrench to remove the retainer screw located on top of the lever.

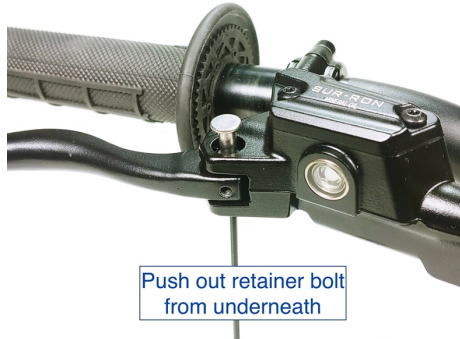

Push out retainer bolt
from underneath

Push out the retainer bolt from underneath



2mm hex clockwise

Use the 2mm hex to loosen the reach adjuster screw all the way out.



Remove barrel from OEM lever

Remove the barrel from the OEM lever



Insert barrel into ASV lever

Insert the barrel into the ASV lever




2mm hex counterclockwise

Use a 2mm hex counterclockwise to screw in the ASV lever



Adjust until screw is
even with lever

Adjust the screw until it is even with the lever

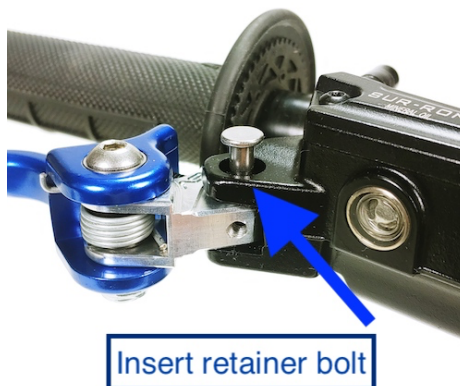

Insert retainer bolt

Push the retainer bolt through the top



2mm hex
clockwise

Tighten the retainer screw on the ASV lever

ADJUST LEVER REACH: Loosen the acorn nut on the lever with a 10mm wrench. Then, use a 3mm hex on the inside screw to adjust reach. Once you have found your ideal reach, tighten the acorn nut.

NEED HELP? Contact techsupport@asvinventions.com or call us at 714-861-1400