Installation Guide
Unbreakable Levers for SUR-RON / Talaria E-Bikes #RE02

Tools Needed

- 2mm, 3mm, and 4mm hex wrench

CAUTION: REMOVE BATTERY BEFORE ATTEMPTING INSTALL!

Use a 2mm hex wrench to remove the retainer screw located on top of the lever.

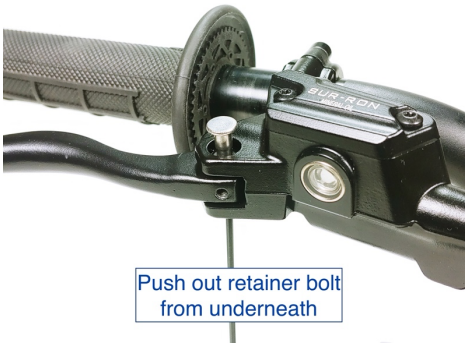

Push out the retainer bolt from underneath

Use the 2mm hex to loosen the reach adjuster screw all the way out.

Remove the barrel from the OEM lever

Insert the barrel into the ASV lever

Use a 2mm hex counterclockwise to screw in the ASV lever

Adjust the screw until it is even with the lever

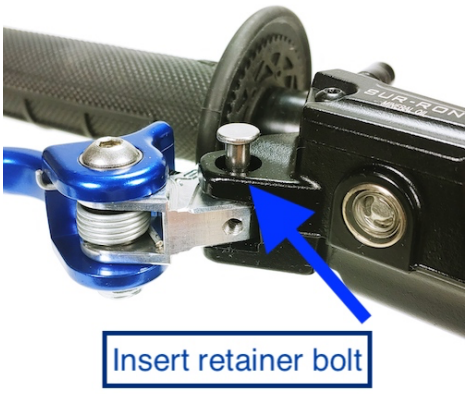

Push the retainer bolt through the top

Align the retainer screw into the ASV lever so that it is aiming directly at the retainer bolt and tighten. Do not align the retainer screw with the flat surface of the ASV lever. It should go in easily. Do not force it or it will strip.

ADJUST LEVER REACH: Loosen the acorn nut on the lever with a 10mm wrench. Then, use a 3mm hex on the inside screw to adjust reach. Once you have found your ideal reach, tighten the acorn nut.

NEED HELP? Contact techsupport@asvinventions.com or call us at 714-861-1400